

### Freeze Protection for your PVB

- Turn off Valve 1
- Open Test Cocks 3 & 4
- Water will come out but will stop shortly
- Insulate pipe 5
- Turn controller off

### Repressurizing Your System

- Close valve 2
- Close test cocks 3 & 4
- Open valve 1 slowly
- You will hear the spring seat and some water will come out, no problem.
- open valve 2 slowly until you no longer hear the water rushing and then open completely.
- Set controller as needed.

